

Y04/YL4 INSTALLATION INSTRUCTIONS

General Description: This application should be installed and used as recommended by the National Fire Protection Association standards and practices.

The Installer should be familiar with these requirements together with any local codes or special requirements of the local Fire Authority having jurisdiction.

The alarm sounders are intended for connection to the output alarm circuit of a UL listed fire alarm control panel only. All alarms are compatible with DC line status monitoring. The alarm sounders are suitable for outdoor use (-35°C to +66°C).

Installation procedures must confirm to appropriate agency requirements including but not limited to the following:-

NFPA72E, NEC ART.760 ET.AL., CAN/ULC-S524-M86, CEC PART 1 SEC 32

Installation: The sounder or combined sounder strobe units can be affixed to most surfaces using the back box supplied separately.

Supply input: Ensure that the supply is correct for the voltage rating of the sounder or combined sounder strobe being installed. Ensure that the supply is OFF before making any connection and wire only in accordance with the terminal label detail.

Sound selection: Ensure the supply is OFF before proceeding. All dc and ac units have selectable alarm sounds (see table below for details) and are selectable by means of a 5 way di switch SW1. A second sound is made available upon the application of a third wire connected to terminal TB1/3 as shown in Fig. 1 while still connected to terminal TB1/2. Alternatively 1st and 2nd stage sound signals can be generated by supply reversal (FOR DC UNITS ONLY) see Fig. 2. Independent second stage sound is available by using SW2 (OPTIONAL- only fitted with orders).

WARNING - Loud alarm sound. Wear ear defenders when testing, installing and commissioning.

- HIGH VOLTAGES ARE PRESENT WITHIN THE BEACON WHEN OPERATIONAL


SOUND SELECTION TABLE

<i>First Stage Sound</i>	<i>frequency Hertz</i>	<i>rept. rate</i>	<i>Second Stage</i>	<i>switches 1 2 3 4 5</i>	<i>Special Application</i>
1 Alternate two-tone	800-1000	0.5	3	1 1 1 1 1	Fire Alarms
2 Alternate two-tone	2500-3100	0.5	4	0 1 1 1 1	Security Alarms
3 Alternate fast two-tone	800-1000	0.25	7	1 0 1 1 1	Increased urgency
4 Alternate fast two-tone	2500-3100	0.25	8	0 0 1 1 1	Security deterrent
5 Alternate two-tone	440-554	0.4/0.1	14	1 1 0 1 1	AFNOR, France
6 Alternate two-tone	430-470	1.0	14	0 1 0 1 1	
7 Alternate v.fast two-tone	800-1000	0.13	12	1 0 0 1 1	
8 Alternate v.fast two-tone	2500-3200	0.07	13	0 0 0 1 1	
9 Alternate two-tone	440-554	2.0	10	1 1 1 0 1	Turn-out, Sweden
10 Continuous note	700	-	1	0 1 1 0 1	All-clear, Sweden
11 Continuous note	1000	-	31	1 0 1 0 1	
12 Continuous note	1000	-	7	0 0 1 0 1	
13 Continuous note	2300	-	2	1 1 0 0 1	
14 Continuous note	440	-	9	0 1 0 0 1	
15 Interrupted tone	1000	2.0	31	1 0 0 0 1	
16 Interrupted tone	420	1.25	30	0 0 0 0 1	AS2220, Australia
17 Interrupted tone	1000	0.5	1	1 1 1 1 0	
18 Interrupted tone	2500	0.25	4	0 1 1 1 0	
19 Interrupted tone	2500	0.5	2	1 0 1 1 0	
20 Interrupted tone	700	6/12	10	0 0 1 1 0	Pre-vital mess, Sweden
21 Interrupted tone	1000	1.0	32	1 1 0 1 0	
22 Interrupted tone	700	4.0	10	0 1 0 1 0	Air-raid, Sweden
23 Interrupted tone	700	0.25	10	1 0 0 1 0	Local warning, Sweden
24 Interrupted tone	720	0.7/0.3	10	0 0 0 1 0	Industrial alarm, Germany
25 Int,fast,rising volume	1400	0.25	26	1 1 1 0 0	
26 Fast siren	250-1200	0.085	11	0 1 1 0 0	
27 Rising constant, fall	1000	10/40/10	17	1 0 1 0 0	Industrial alarm, Germany
28 ISO 8201 Evacuation	800-1000	as std	11	0 0 1 0 0	Int'l evacuation alarm
29 Fast whoop	500-1000	0.15	32	1 1 0 0 0	
30 Slow whoop	500-1200	4.5	12	0 1 0 0 0	Evacuation, The Netherlands
31 Reverse sweep	1200-500	1	11	1 0 0 0 0	Evacuation, Germany
32 Siren	500-1200	3.0	26	0 0 0 0 0	

switch settings: ON=1 and OFF=0


MOUNTING: The Y04/YL4 series alarm units are supplied separate from the back box. The back box should be mounted to a suitable surface or to a standard wiring box using any of the mounting holes. 20mm cable entries are provided on all sides and in the base. To maintain the integrity of the weather seal, the cable entry must be via a suitable sealed gland.

FIGURE 1: DC INPUT - 2nd STAGE WITH THIRD WIRE

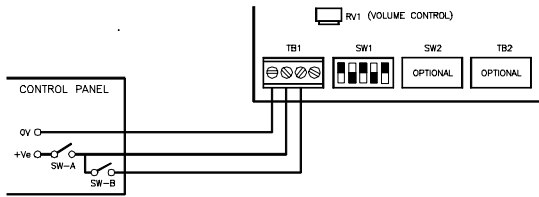


LINE INTEGRITY ON DC SYSTEMS
 - FOR 3 WIRE 2 STAGE ALARM SYSTEM,
 MONITOR VIA REVERSE POLARITY
 - FOR 2 WIRE 2 STAGE ALARM SYSTEM,
 MONITOR VIA THRESHOLD (APPLIED
 VOLTAGE < 1V)

FIGURE 2: DC INPUT - 2nd STAGE BY SUPPLY REVERSAL

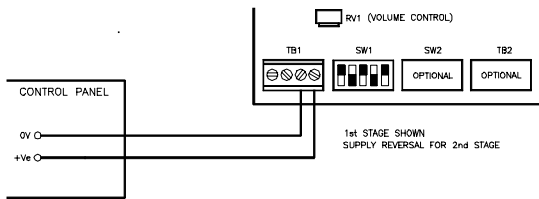



AN END-OF-LINE (E.O.L.) RESISTOR IS
 REQUIRED FOR LINE MONITORING AND
 IT SHOULD BE A MINIMUM RESISTANCE
 OF 3K3 OHMS AND 0.5WATTS, WIRE-
 WOUND OR METAL FILM TYPE

FIGURE 3: AC INPUT

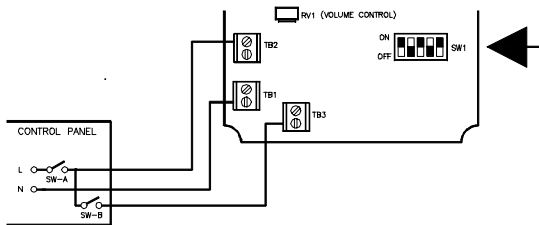

SOUND
 SELECTION

FIGURE 4: SYSTEM CONNECTION

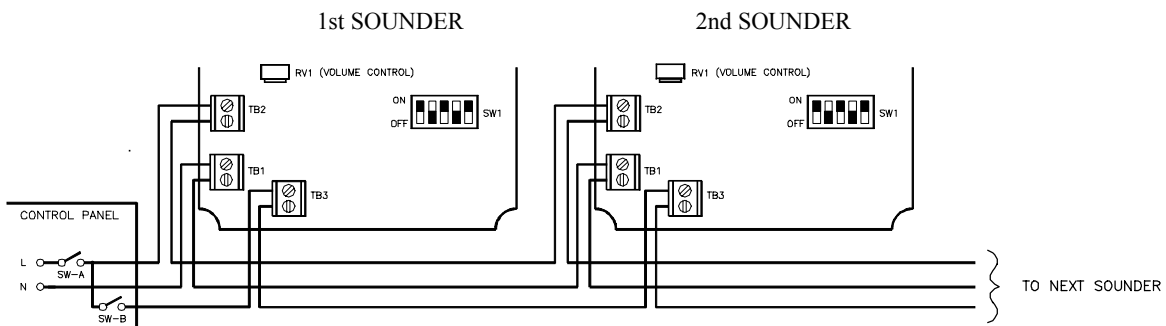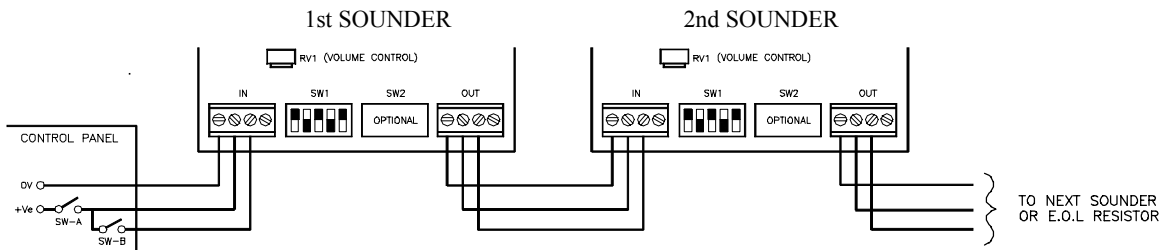

Note: The power supply for the Xenon Beacons (STROBES) is via the on-board terminal block:
 For DC: Terminal (+) for +ve and Terminal (-) for 0v
 For AC: Terminal (L) for LIVE and Terminal (N) for NEUTRAL.

CLIFFORD & SNELL, TOM CRIBB ROAD, THAMESMEAD LONDON SE28 0BH
TEL: 0208 317 1717 FAX: 0208 317 2400
web: cliffordandsnell.com Email: cliffordandsnell@aol.com